



VCCT130 Troubleshooting Guide

No image on monitor

- Verify camera cable connection at monitor.
- Verify camera is connected to camera cable.
- Connect camera directly to monitor if possible.
- Connect known good camera/cable to monitor.
- Connect known good camera to existing cable.
- Connect known good cable between monitor and existing camera.

Flickering or rolling Image

- Switch to secondary camera input on monitor.
 - If image is stable, replace monitor.
- Check for 12V+ to monitor.
- Connect known good camera/cable to monitor.
 - If image is stable, check camera/cable.
 - If image still flickers/rolls replace monitor.

No Sound

- Verify monitor supports audio feature.
- Verify volume is turned up on monitor.
- Verify Audio Trigger is connected on monitor's harness where applicable.
- Verify camera cable connection at monitor.
- Verify camera is connected to camera cable.
- Connect camera directly to monitor if possible.
- Connect known good camera/cable to monitor.
- Connect known good camera to existing cable.
- Connect known good cable between monitor and existing camera.

Camera will not tilt

- Verify monitor supports tilt feature.
- Verify camera cable connection at monitor.
- Verify camera is connected to camera cable.
- Connect known good camera/cable to monitor.
- Connect known good camera to existing cable.
- Connect known good cable between monitor and existing camera.