



## **JCD3006 Troubleshooting Guide**

### **Radio will not turn ON**

- Try the reset button.
- Check fuse.
- Check 12V+ on battery wire to radio (YELLOW wire).
- Check 12V+ on accessory wire to radio (RED wire).
- Check Ground.

### **Radio turns ON, but no sound**

- Verify **Volume**, **Fader/Balance**, **Mute** controls are set correctly (see owners manual).
- Try RESET button.
- Verify proper speaker connections.
- Check for shorts or opens on speaker wires.

### **No Satellite Radio reception**

- See Owners' Manual for correct operating instructions.
- Verify you have the optional equipment installed (satellite radio tuner & satellite radio antenna).
- Verify you are outdoors and there are no line-of-sight blockages of the signal to the antenna (roof air conditioners, TV antennas, etc).
- Verify you have activated the subscription service with Sirius .
- Check with preview channel (184).

### **CD does not load fully**

- Make sure unit has power and no other CD is currently inside.
- Inspect radio's chassis to verify shipping screw(s) have been removed.

### **CD does not play correctly**

- Check to make sure disc is inserted correctly.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have not exceeded 30 degrees mounting angle.

### **No AM or FM reception**

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Try a different antenna.