



## **MS6501 Troubleshooting Guide**

### **No Audio**

- Check for any physical damage to speaker.
- Verify Speaker wires are connected properly.
- Verify Radio controls are properly set for the speaker.
- Verify with a meter there is power output going to speaker.
- Connect a known good speaker in place of the one in question.

### **Distortion**

- Check for any physical damage to speaker.
- Verify if the distortion is at all levels of volume.
- Verify radio control settings are not causing issue.

### **Crackling**

- Check for any physical damage to speaker.
- Verify speaker wires have solid connections.
- Check for any possible shorts in the speaker wiring.
- When possible, play a CD in the player to get the cleanest audio possible to rule out static in the radio's reception.

05.14.07