



AOM561 Troubleshooting Guide

Monitor will not power up – no backlight on power button

- Confirm 12v+ to monitor.
- Confirm ground connection.
- Check vehicle's fuse and circuit for proper operation.

No image on screen

- Verify cable is connected to monitor.
- Verify camera is connected to cable.
- Connect known good camera and cable to monitor.
 - If image appears connect cable to existing camera.
 - If image remains replace original cable.
 - If image disappears replace original camera.

Input does not trigger properly (Standby or otherwise)

- See owner's manual for proper wiring.
- Confirm 12v + to trigger lead.
 - *Note:* Trigger will remain active as long as there is 12VDC+ to that wire, preventing control or access to other inputs/cameras.