



OCA85E Troubleshooting Guide

No Video, Audio, Power

- Verify cable harness is plugged in securely at both ends.
- Verify condition of cable.
- Check both ends of camera cable for bent or missing pins.
- Check for any shorts. Bare both ends of the cable and test each pin against each other for shorts.