


# VOM74MM Troubleshooting

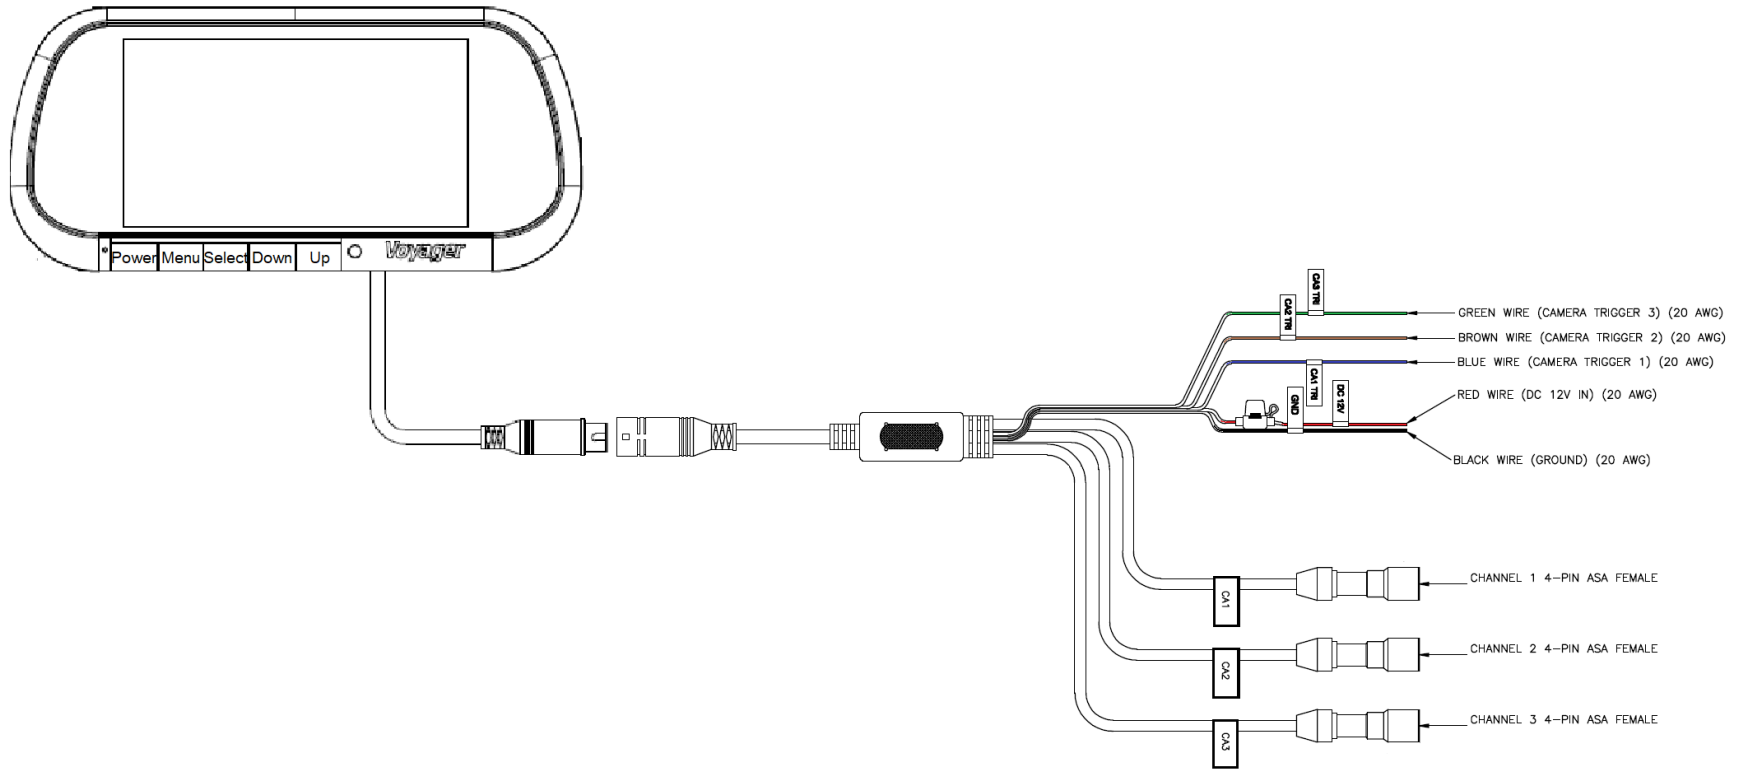

| Seeing “No Signal” on Display                                                                                                                                                                                                                                                                                                                               | Monitor Always On or Functions are INOP                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>• The monitor will display “No Signal” when one of the following is true.                             <ul style="list-style-type: none"> <li>○ The monitor is on a CH SOURCE that does not have a camera connected.</li> <li>○ The camera is not connected.</li> <li>○ The camera has failed.</li> </ul> </li> </ul> | <ul style="list-style-type: none"> <li>• The monitor will lock up and only display a single CH SOURCE when a CAMERA TRIGGER sees voltage.</li> <li>• The monitor’s POWER, MENU, and SELECT buttons will do nothing while a CH SOURCE is triggered.</li> <li>• If a CAMERA TRIGGER is active please check the BLUE, BROWN, and GREEN wires for voltage.</li> <li>• A CAMERA TRIGGER does not <i>need</i> to be connected.</li> </ul> |

|                   |                         |                  |               |
|-------------------|-------------------------|------------------|---------------|
| Original Release: | 8/29/2019               | Tracking Number: | TSG-10002     |
| Current Revision: | 1                       | Written By:      | Harold Arnold |
| Revision Date:    | 8/29/2019               | Approved By:     | Kurt Wood     |
| Description:      | VOM74MM Troubleshooting |                  |               |